



GRÜN SYS GREENLINE GS-01




TOOLS



ATTENTION:

When using the anchor device, observe the GRÜN safety instructions.
When mounting the anchor device, observe the assembly instructions.

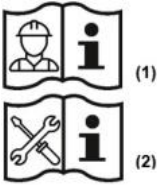

Abbreviations	Meaning
EAE	Einzelanschlageinrichtung (Single anchor device)
SYS	Seil-System (Lifeline system)
ASP	Abseilpunkt (Abseil point)
BEF	Befestigungsset (Fixing set)
ZUB	Zubehör (Accessories)

ATTENTION:

To use the anchor device, observe the GRÜN safety instructions (1).
To attach the anchor device, observe the installation instructions (2).

Only the installation instructions from GRÜN apply.
Only the fixing materials supplied by GRÜN are permitted to be used.
Do not replace individual parts.

General information on use:

The rope glider:

- acts as a mobile anchor point to secure one person to GREENLINE® rope systems when used in conjunction with personal protective equipment in accordance with EN 363 (fall arrest systems -> maximum applied force: 6 kN).
- is not suitable for rope-assisted work.

must always be removed from the rope system after use and stored safely.

1 Technical data

Product specifications:

Requirement	Test centre	Marking	User
DIN EN 795:2012 CEN/TS 16415:2017	DEKRA Testing and Certification GmbH Persönliche Schutzausrüstung/Personal Protective Equipment Dinnendahlstr. 9 44809 Bochum - Germany		
abZ/aBG Z-14.9-804	Deutsches Institut für Bautechnik (DIBt) Kolonnenstr. 30 B 10829 Berlin - Germany		

Cable slider GRÜN SYS GREENLINE GS-01:




Material: Stainless steel casting
Dimensions 90 mm x 77 mm x 36 mm



2 Assembly specifications

The cable slider must be inspected for visible defects **before each use**.

If the **maximum gap size** of 4 mm is exceeded, the cable slider must be replaced.

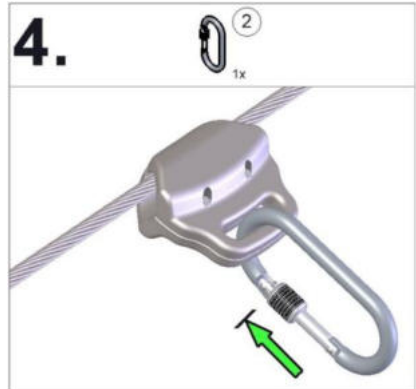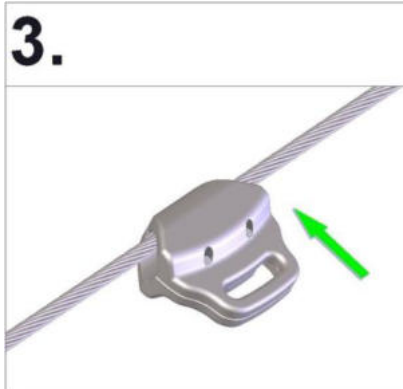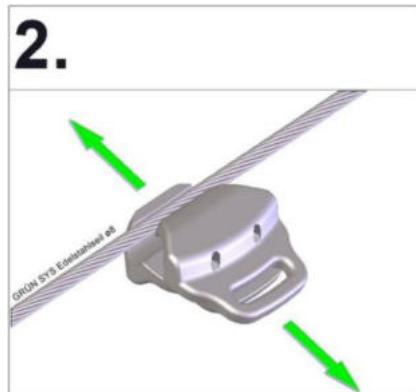

3 Product labelling

Typ plate

Example illustration of labelling



① Manufacturer	④ Max. users
② Product name	⑤ Serial number, year of manufacture
③ Standard with year of issue	⑥ Observe installation instructions & safety instructions

4 Utilisation variants



MA_GREENLINE_GS-01_en_26_03

